



STORM VISORS

PREMIUM MATERIALS | PRECISION FIT | DESIGNED IN EUROPE

QUICK START GUIDE

For T-visor helmet installation



ICONIC HELMETS. A CLEARER VIEW.

Thank you for choosing Storm Visors.

This guide shows how to clean your helmet surface and install your visor for the best fit.

WHAT'S INCLUDED



Premium
Visor



Microfiber
Cloth



Cleaning
Wipe



Installation
Tape



Fabric
Gloves



Quick Start
Guide



Storm Visors
Sticker



QUICK START GUIDE

STEP 1 — PREPARE & CLEAN THE HELMET

A CLEAN SURFACE ENSURES MAXIMUM ADHESION AND A PERFECT FIT.



CLEAN TODAY.
PERFORMANCE TOMORROW.



1.

Put on the fabric gloves before handling the visor.



2.

Remove dust and loose debris.



3.

Wipe the mounting area with the microfiber cloth.



4.

Use the cleaning wipe to remove grease and fingerprints.



5.

Let the surface dry fully before applying tape.



TIP

Do not touch the cleaned mounting area or visor surface with your bare fingers before installation.



STORM VISORS

PREMIUM MATERIALS | PRECISION FIT | DESIGNED IN EUROPE

QUICK START GUIDE

STEP 2 — APPLY TAPE & INSTALL THE VISOR

A SECURE FIT. A BOLDER LOOK.

PRECISION
PROTECTION
WITHOUT LIMITS

1


Keep the fabric gloves on and test-fit the visor before removing any tape backing.



KEEP GLOVES ON & TEST-FIT

2

Apply the installation tape to the visor or helmet mounting points.

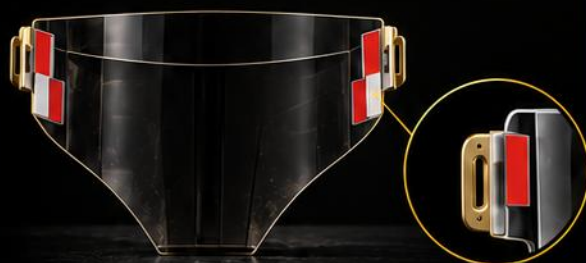

APPLY INSTALLATION TAPE

3

Peel the backing and align the visor carefully from the center outward.



ALIGN FROM CENTER OUTWARD

4

Press firmly along all contact points for 30 seconds.



PRESS FIRMLY

5

Recheck alignment before use.



CHECK & CONFIRM

- ☒ EVEN FIT
- ☒ SECURE MOUNTS
- ☒ CLEAR VISION
- ☒ READY FOR ACTION



TIP

For best adhesion, leave the helmet at room temperature and avoid heavy stress for several hours.

A STRONGER BOND
GOES FURTHER



STORM VISORS

QUICK START GUIDE

STEP 3 - FINAL CHECK & CARE

Finish the installation cleanly and protect the visor surface.



1

Keep the fabric gloves on while you make the final alignment check.

2

Press the mounted contact points firmly and confirm that the visor sits evenly.

3

Remove the gloves only after installation is complete. Avoid touching the clear visor area.

4

For routine cleaning, use the microfiber cloth. If needed, lightly dampen it with clean water.

5

Avoid abrasive cleaners or strong solvents unless you know they are safe for your visor material and coating.

TIP

Store the helmet in a clean, dry place and keep the microfiber cloth with the kit for quick touch-ups.